





# Neptune Pump Connections and Settings

Automation	SW1	SW2	SW3	SW4
NONE	OFF	OFF	OFF	DON'T CARE
WATERWAY / MODBUS	OFF	OFF	ON	DON'T CARE
HAYWARD	OFF	ON	OFF	DON'T CARE
PENTAIR	OFF	ON	ON	DON'T CARE
JANDY	ON	OFF	OFF	DON'T CARE




## DIP Switch Table Settings

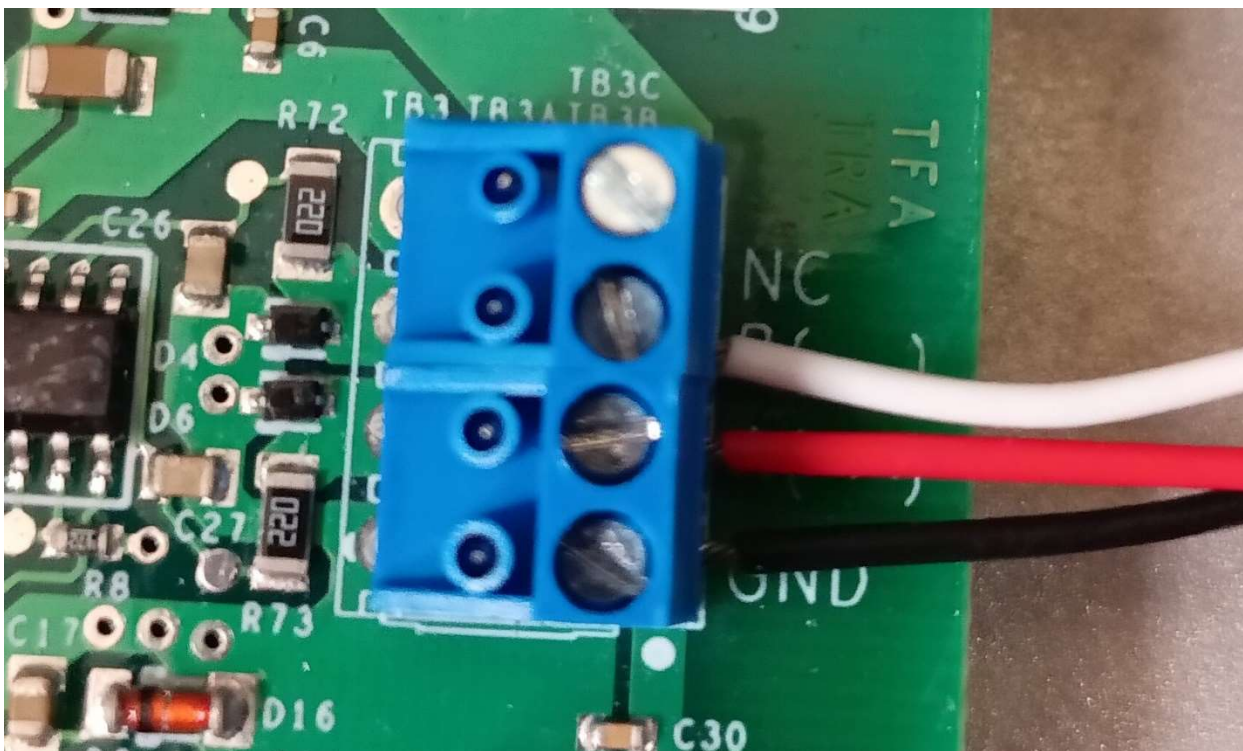



## Neptune RS485 Port Connections

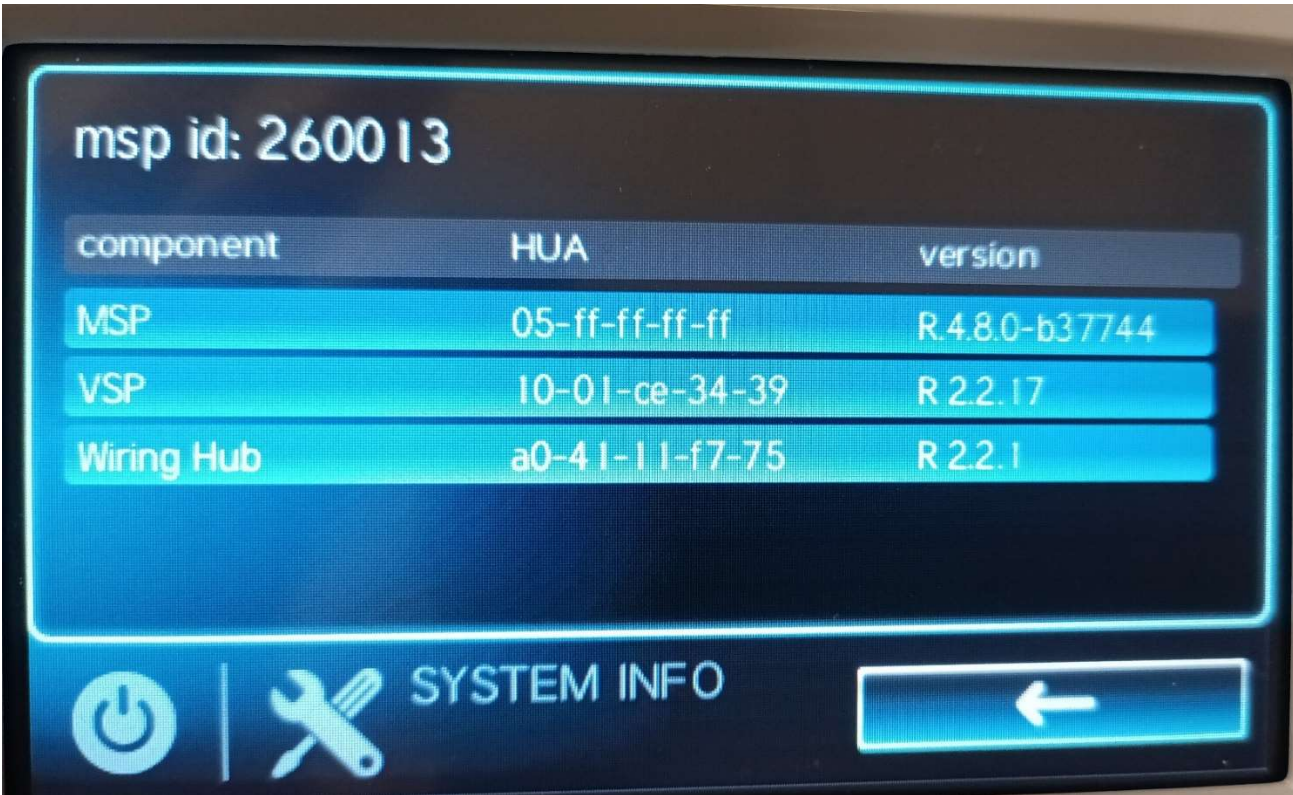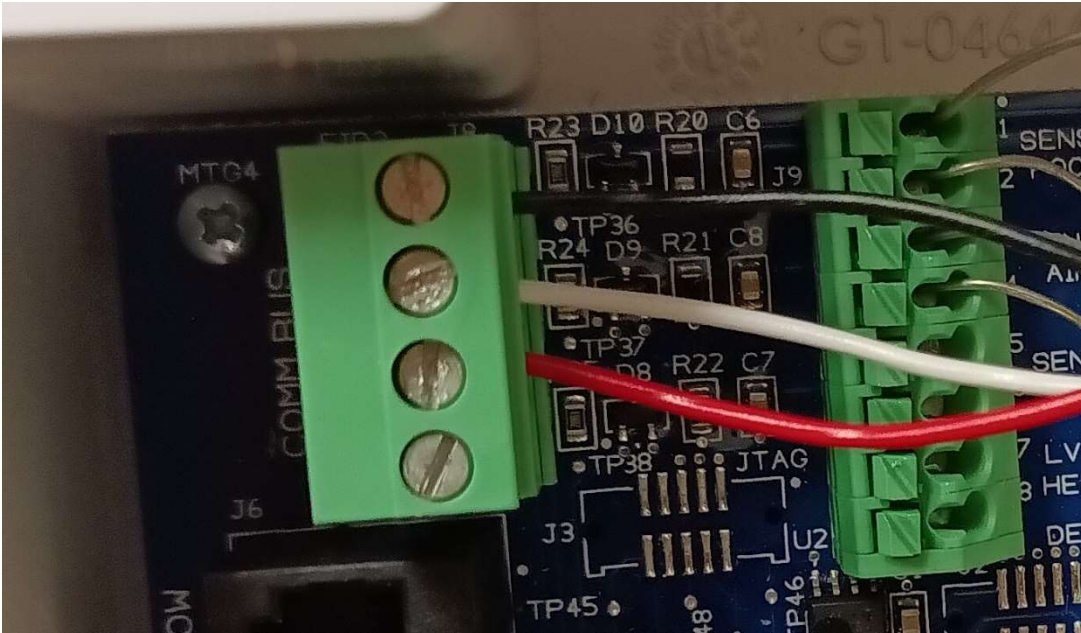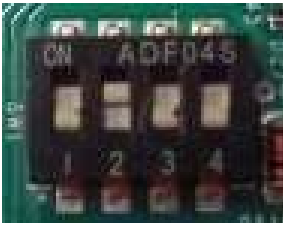



**Hayward RS485 Connections, DIP Switch, and Pump Selection HUA 10-01-CE-34-39. This specific HUA will always show up.**

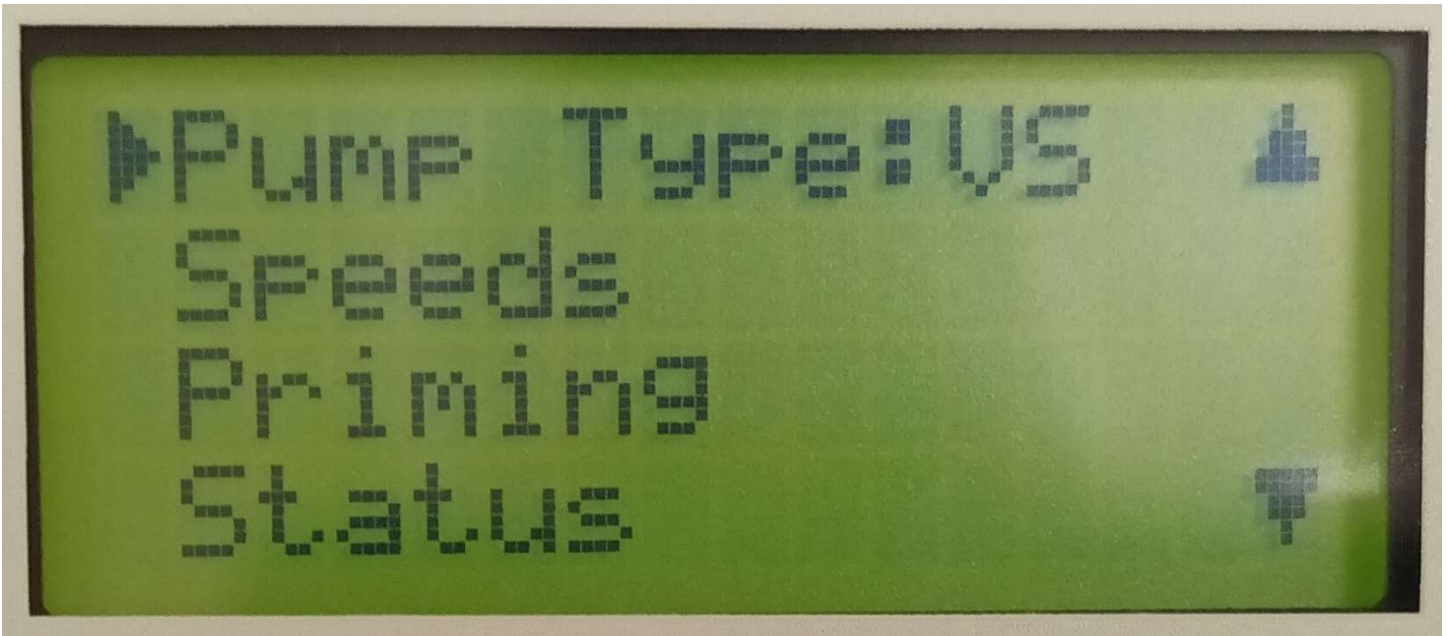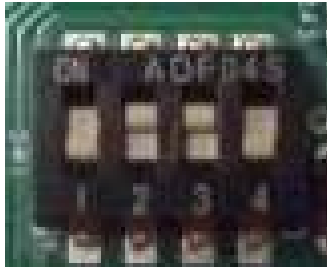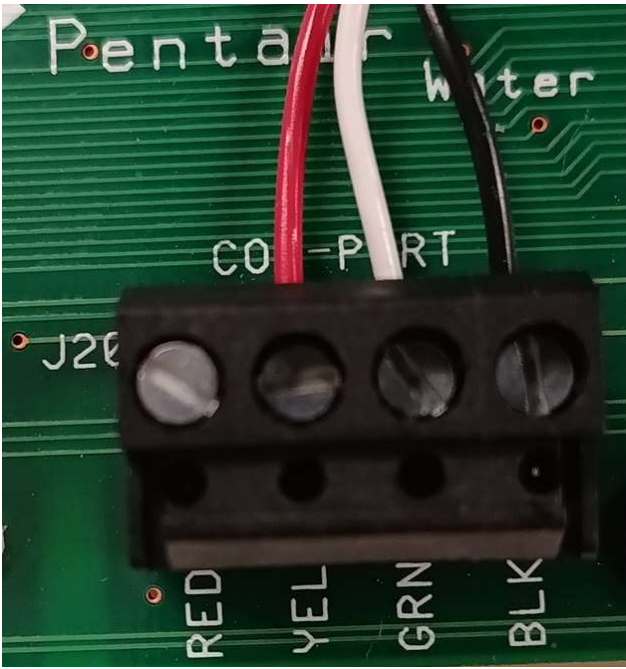

**Pentair RS485 Port Connections, DIP Switch, and Pump Type Selection**

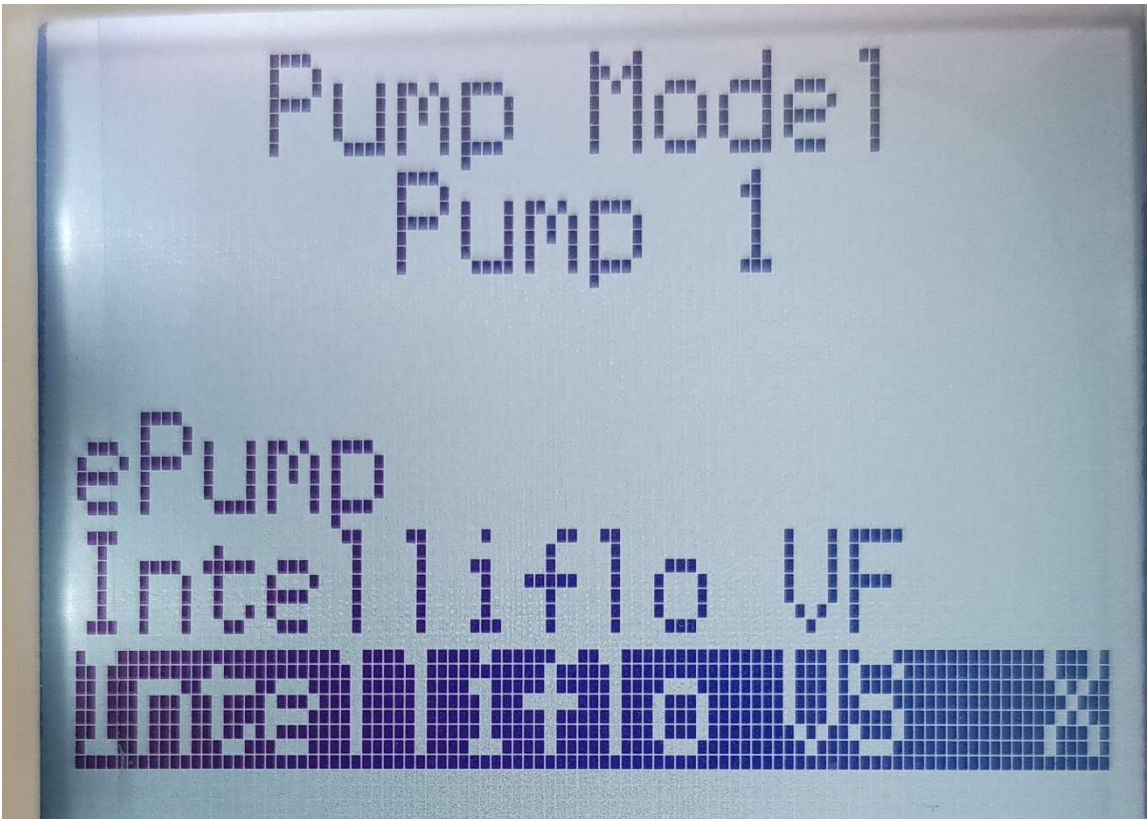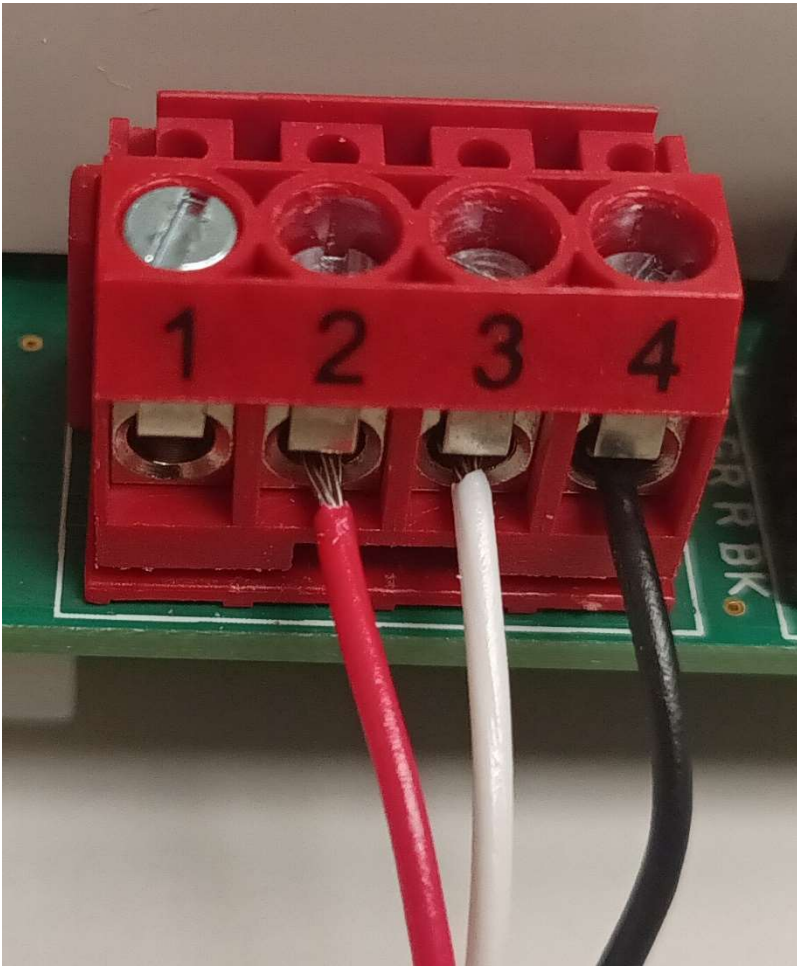

Jandy RS485 Port Connections, DIP Switch, and Pump Type Selection

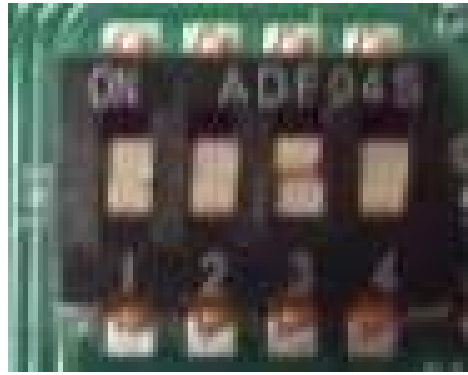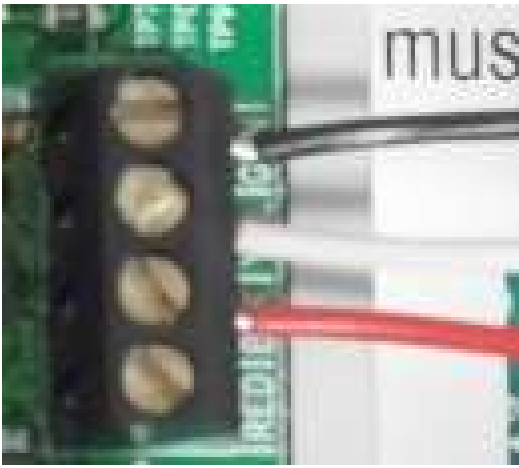

# Assign Output

<b>Filter Pump</b>	WWW VSP2
J1 Intake	Not used

**Waterway Connections, DIP Switch, and Pump Type Selection**